
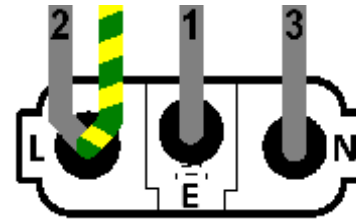


# Wiring guide: Promatic Radios (Built After October 2011)

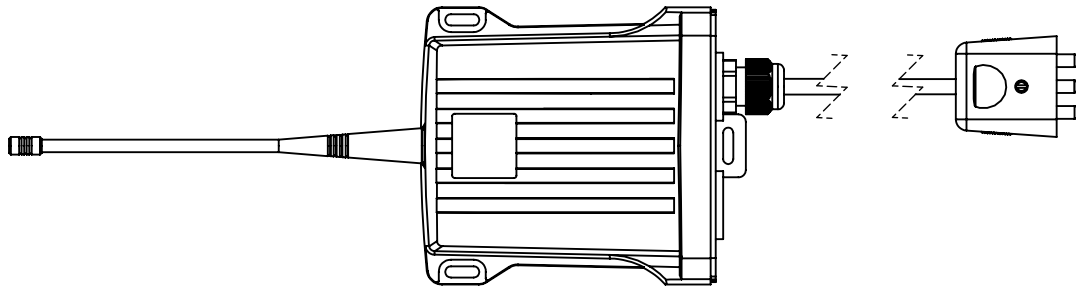


Wiring side of plug

Pin L - No. 2 & Green/Yellow  
 Pin E - No. 1  
 Pin N - No. 3

Note: Pin E may be marked  $\perp$

**RADIO FITTED WITH "DURAPLUG" OR "PERMAPLUG" CONNECTOR**

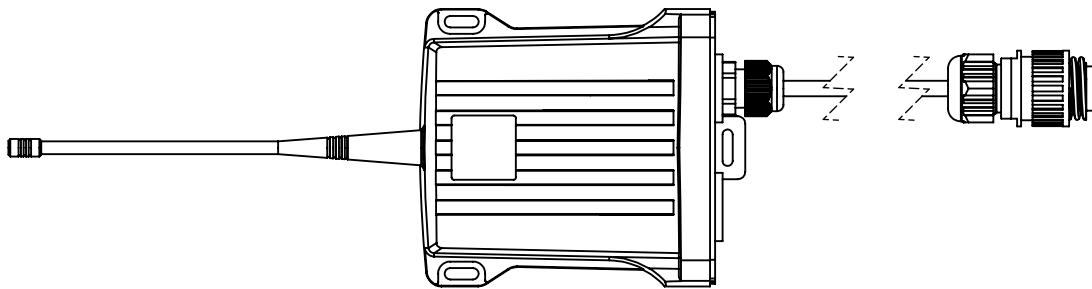


Wiring side of plug

Pin 1 - No. 1  
 Pin 2 - No. 2 & Green/Yellow  
 Pin 3 - No. 3  
 Pin 4 - Not used

Note: Pin 4 marked  $\perp$

**RADIO FITTED WITH "HIRSCHMANN" 4 PIN CONNECTOR**

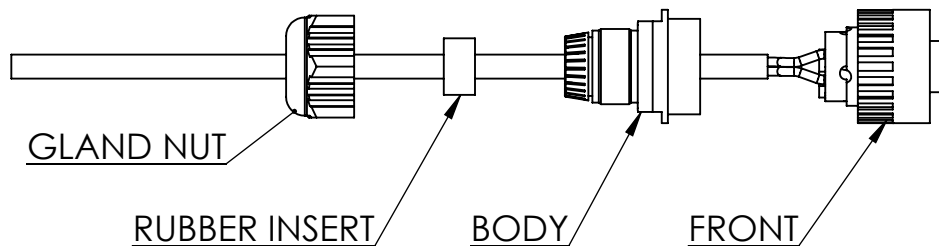

Assemble plug components as shown, use the rubber insert with the smaller centre hole (discard the other one)  
 After wiring fit the front section to the body and screw together firmly before tightening the rear gland nut.