



Wiring guide: Promatic Radios (Built Before October 2011)

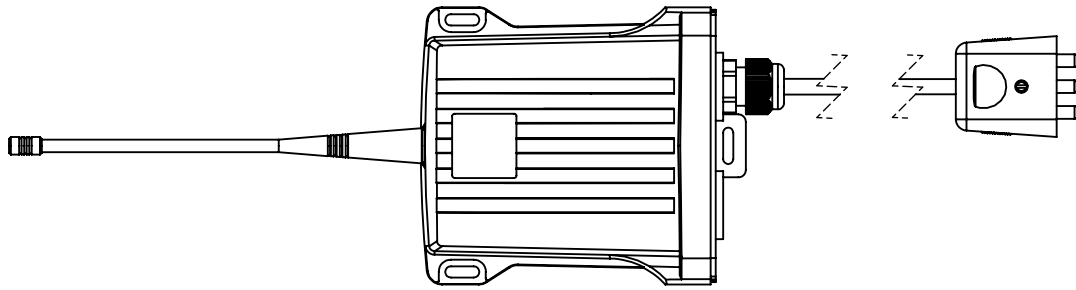

RADIO FITTED WITH "DURAPLUG" OR "PERMAPLUG" CONNECTOR

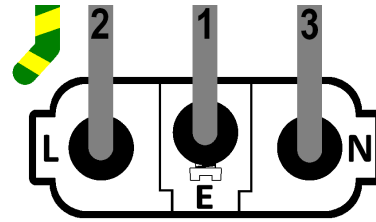


Wiring side of plug


Pin L - No. 2
Pin E - No. 1
Pin N - No. 3

Green/Yellow core not used

Note: Pin E may be marked ⊥

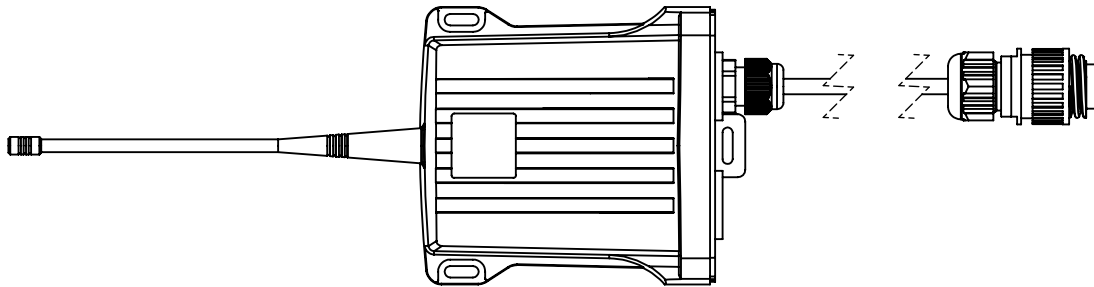

RADIO FITTED WITH "HIRSCHMANN" 4 PIN CONNECTOR

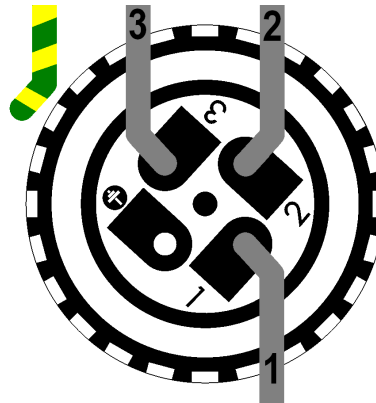


Wiring side of plug

Pin 1 - No. 1
Pin 2 - No. 2
Pin 3 - No. 3
Pin 4 - Not used

Green/Yellow core not used

Note: Pin 4 marked ⊥

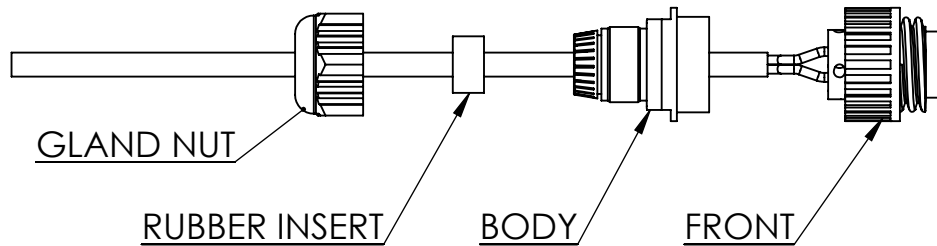

Assemble plug components as shown, use the rubber insert with the smaller centre hole (discard the other one)
After wiring fit the front section to the body and screw together firmly before tightening the rear gland nut.